

1 Safety Guidance

1.1 Safety Check

Before installing the device, you must check the following items.

1.1.1 Electric Safety

- Ensure that there are no inflammable, conductive or moist objects around. Check whether the cables are aged and whether other electrical appliances are placed stably,
- Check whether the alternating or direct input current is within the allowed range of the device, whether the polarity of the direct current is correct, and whether the earth line is properly connected.

1.1.2 Device Position

- Because the running electric device easily generates heat, please ensure to place the device in a well-ventilated environment,
- Avoid direct sunshine, and do not place the device on a PC case,
- Keep the device away from heat and water,
- Check whether power supply is available. The input voltage fluctuation range must be smaller than 10%. The power plug should not share one socket with a hair drier, an iron or a refrigerator.

1.2 Safety Caution

- Read the quick installation guide carefully before using the device,
- Note all Cautions in the quick installation guide,
- Do not use any accessory that does not belong to the device without prior consent of the manufacture, as it may cause fire or product damage,
- Use the power adapter accompanied in the package,
- Do not place any object on the device,
- Keep the device dry, ventilated, rainproof, and clean,
- During lightning weather, unplug the power plug and all connection cables, to protect the device against lightning,

HALNy HL-1G Quick Installation Guide

- Clean the device using a soft and dry cloth rather than liquid or atomizers. Power off the device before cleansing it,
- Power off the idle device,
- Keep the ventilation hole clean and prevent any object from dropping into the device through it. Otherwise, it may cause short circuit and further cause device damage or fire. Do not spray liquid on the surface of the device,
- Do not open the case of the device, especially during device power-on,
- Before plugging or unplugging the power, ensure that the power is off, thus avoiding surge,
- Be careful when unplugging the power, as the transformer may be very hot,
- Cover the optical interface with fiber interface cap when it is not in use. Avoid direct eye exposure to the laser emitted from the optical interface. Wear safety glasses if possible, to protect your eyes.



Caution:

Please read the above safety guidance carefully before device use. Users should assume responsibilities for any accidents due to noncompliance with the above instructions.

2 Overview

This chapter mainly describes functions and the structure of the **HALNy HL-1G**.

2.1 Features and Function

- Fast rate. Support up to 1.25Gbps uplink and 2.5Gbps downlink data transmission rates,
- Strong maintainability. Provide various statuses of LED indicators, to help troubleshooting,
- Long transmission distance, up to 20 km.

2.2 Front Panel and Rear Panel

The description of the front panel and the rear panel of the GPON ONU as follows.

2.2.1 Front Panel

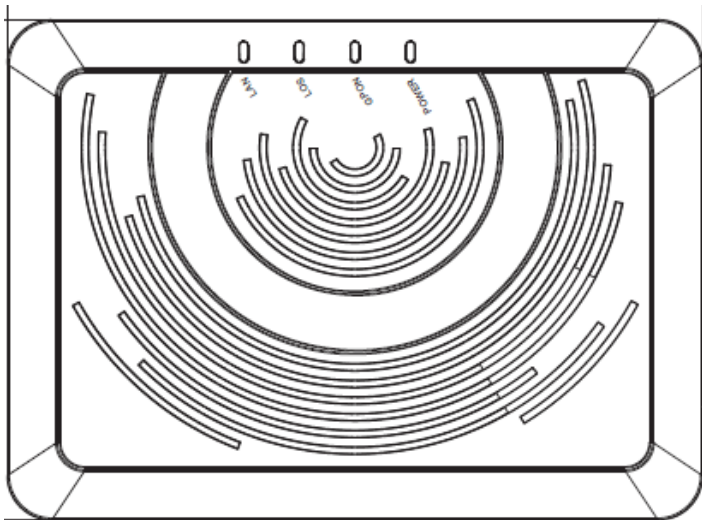


Figure 1 - Front Panel

LED	Status	Description
Power	On	The power works normally.
	Off	Powered off or the power supply is abnormal.
PON	On	ONU registers successfully.
	Blink	ONU is trying to establish connection.
	Off	ONU fails to register.
LOS	Blink	The receiving optical power of the ONU is lower than the sensitivity of the optical receiver.
	Off	The receiving optical power of the ONU is normal.
	On	ONU fails to receive optical.
LAN	On	The connection of Ethernet interface is normal.
	Blink	Data is being transmitted through the Ethernet interface.
	Off	The connection of the Ethernet interface fails to establish.

Table 1 - ONU LED Indication Table

2.2.2 Rear Panel

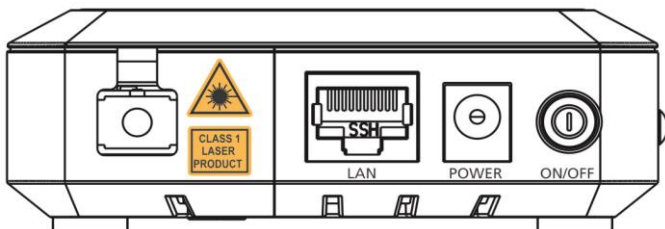


Fig 2 Rear Panel

ONU Rear Panel Description:


Interface / Button	Function
GPON	SC/APC connecting to the fiber.
LAN	Ethernet interface, for connecting to a computer or an Ethernet interface of a switch.
Reset	Press the button for 5 seconds to reboot ONU and restore the factory default configurations.
Power	Connect power cable.
ON/OFF	Turn on/off the power supply.

3 ONU Installation

The chapter describes the required installation operations before you use the device for the first time.

3.1 Product Networking Application - FTTH

Fiber to the Home (FTTH) means to install the ONU to residences or enterprise buildings. The optical line terminal (OLT) is placed in the central equipment room. The ONU can be placed in the home of a user, or it can provide connection for the user through the Ethernet interface, according to the user requirement. The OLT connects to the ONU with an optical distributor in the point-to-multipoint way. See the following figure.

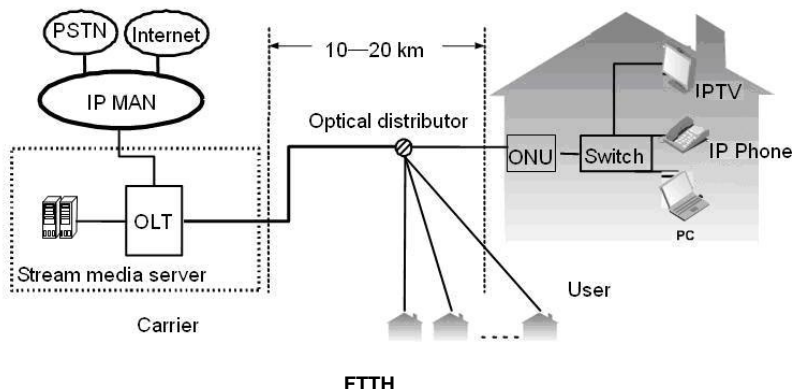


Note :

The ONU applies to installation at home or in the corridor. Because installation and cabling in the corridor are relatively complex, let the professional engineers deploy according to the actual situation. This manual describes the procedure for installing the device at home, and is for reference only.

3.2 Installation Preparations

The Ethernet interface of your computer connects to the Ethernet interface of the ONU. Before installing it, ensure that an Ethernet adapter is already installed in your computer.

3.3 Connecting ONU

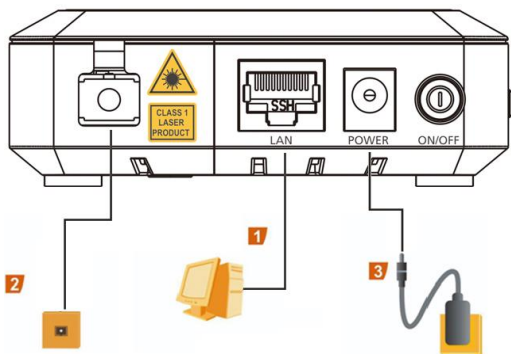

1	PC	2	Fiber	3	Power
---	----	---	-------	---	-------

3.3.1 Connecting the Network Cable

- Step 1** Use the one end of the network cable to connect the Ethernet interface of the computer.
- Step 2** Use other end of a network cable to connect the Ethernet interface on the rear panel of the HALNy HL-1G.

3.3.2 Connecting the Fiber



Caution:

- When a fiber is not in use, ensure to cover the optical interface of the ONU and the dust cap of the optical fiber. Prevent dust pollution or water immersion, which may lead to unavailable fiber and optical interface of the device.
 - If fibers need to be fixed during parallel cabling, do not fasten the fibers too tight. Avoid fiber extrusion, which may lead to increase of fiber material or unavailable fiber.
-

3.2.3 Connecting the Power Adapter and Power Cord

- Connect the output end of the power adapter included in the device package to the input end of the power supply of the ONU ,
- Insert one end of the power cord attached with the device into the input end of the power adapter. Insert the other end of the power cord into the power socket,
- Check whether the Power indicator is on. If it is on, the power supply is normal. Otherwise, check whether the power cord and the power adapter are correctly connected.

4 Troubleshooting

Symptom	Solution
The POWER indicator is not on	<ul style="list-style-type: none"> ● Check whether the power connection is correct, ● Check whether the power adapter matches the device.
The PON indicator is not on	<ul style="list-style-type: none"> ● Check whether the SN of ONU matches OLT, ● Check whether the optical attenuation is in the normal range.
The LOS indicator is not on	<ul style="list-style-type: none"> ● Check whether the optical fiber cable is properly inserted, ● Check whether the optical fiber connector is clean.
The LAN indicators are not on	<ul style="list-style-type: none"> ● Check whether the device is authorized by the carrier, ● Check whether the network cables included in the device package are used, ● Check whether the network cable connection is normal, ● Check whether the indicator of the network adapter is on, ● Check whether the network adapter works in the normal state.

5 Technical Specification

Main Technical Specifications		
Standard	GPON Standard	ITU-T G.984
Rate	Uplink	1.25Gbps
	Downlink	2.5Gbps
Interface	One optical interface	Single Mode
	One LAN port	RJ-45、10/100/1000Mbps、MDI/MDIX Self adaption
Physical Characteristics and Environment Requirements		
Power adapter input	100V~240V AC, 50Hz~60Hz	
Whole-device power supply	12V DC, 0.5A	
Standard power consumption	<5W	
Operating temperature	-5°C~45°C	
Operating humidity	5%~95% (non-condensing)	
Dimension	L x W x H: 146mm x 109mm x 31mm	
Weight	<500g	

Appendix A Acronyms and Abbreviations

GPON	Gigabit Passive Optical Network
FTTB	Fiber to the Building
FTTH	Fiber to the Home
OLT	Optical Line Terminal
ONU	Optical Network Unit
PON	Passive Optical Network

Additional information:

Declaration of Conformity (CE)

This device has been tested and found to comply with the stated standards which are required by the Council Directive of 2014/30/EU. The device complies with this CE Declaration when the installation is done in accordance with the instruction and documentation. The importer and manufacturer don't take responsibility for any issues caused by improper use of the device.

The full document is on below web page and it is available in importer and manufacturer:

CE / warranty terms and conditions:

www.halny.com

Manufacturer / Importer:

FIBRAIN Sp. z o.o

36-062 Zaczernie 190F (POLAND)

info@fibrain.pl

Information furnished by HALNy Networks is believed to be accurate and reliable. However, no responsibility is assumed by importer and manufacturer for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of the manufacturer. Manufacturer reserves the rights to change specifications at any time without notice.